




**DUSK LANTERN
WITH POWER BANK**
Model No. KC005-041

SPECIFICATIONS:

Lumens: 40 - 400 Lumens
Run Time: 5 - 120 hrs
Charging Time: 4-5 hrs
Battery: 4500mAh Lithium
Input: USB-C rechargeable 5V/1A

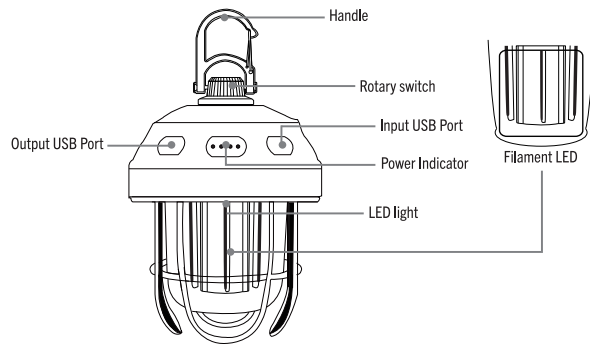

HOW TO USE


Press down on the rotary switch for a three seconds to turn on. The lantern will turn ON in white filament light mode. To move between different light modes press the rotary switch once. This will cycle through the colour mode options (white filament, warm LED, warm pulsing LED, white LED, bright white filament and LED). To control the brightness of the lantern, turn the rotary switch clockwise to increase brightness (400 lumens) or anti-clockwise to dim brightness (40 lumens). To turn the lantern OFF, press the rotary switch down for three seconds.

RUN TIME

The light will run for approximately the times below, depending on your light mode.
Low - 40 lumen - 120 hrs
High - 400 lumen - 5 hrs

front

CHARGING

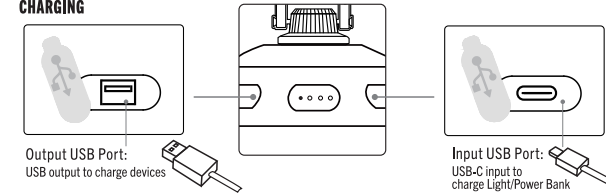

Charging the Dusk Lantern:

Insert the USB-C end of the charging cable into the Input USB Port located underneath the rubber protective cover, then insert the other end of the USB cable into a USB socket or adapter plug (ideally 5V/2A). The Power Indicator should illuminate when charging and show four lights when fully charged. It should take approximately 4-5 hours for a full charge.

Four lights on 75%-100%
Three lights on 50%-75%
Two lights on 25%-50%
One light on Less than 25%

Charging Devices from the Dusk Lantern:

Insert the USB cable that comes with your device into the Output USB port located underneath the rubber protective cover. The USB port has a 5V/2A output and the Powerbank Lantern has a 4500mAh capacity battery. The battery life of the Lantern will be determined by what appliance you are charging.

WARNING

READ CAREFULLY BEFORE OPERATING AND SAVE THESE INSTRUCTIONS.

- To avoid the risk of electric shock. Do not expose to water or rain.
- Do not look directly into LEDs as this may cause damage to your eyes.
- Improper use may result in product damage, decreased battery life and loss of charging capacity.
- Do not store this power bank in high or low temperature environments, small enclosed areas without ventilation or place in fire.
- Do not drop, bump, throw or shake the unit, this may damage internal components.
- Do not disassemble, try to repair or modify the light.
- The unit should be charged every 3 months.
- Keep out of the reach of children.



KIWI camping
Distributed by: Aber Living, Hamilton, NZ
www.kiwicamping.co.nz
5687-07/24

back



17 Mainstreet Place,
PO Box 10095, Te Rapa,
Hamilton 3241, New Zealand
T +64 7 849 7585
E marketing@aber.co.nz

File Name: 5687 KC005-041 Dusk Lantern Instructions
Dimensions: 140 H x 90 W (mm)
Date: 14.07.2024
Stock Paper — Keyline
Print Colours: Black