




Tuatara SSE Annex
Model No. KC077-040

PITCHING INSTRUCTIONS

Your awning includes:

- 1 x annex
- 2 x guy ropes
- 6 x pegs (7mm D X 225mm L)

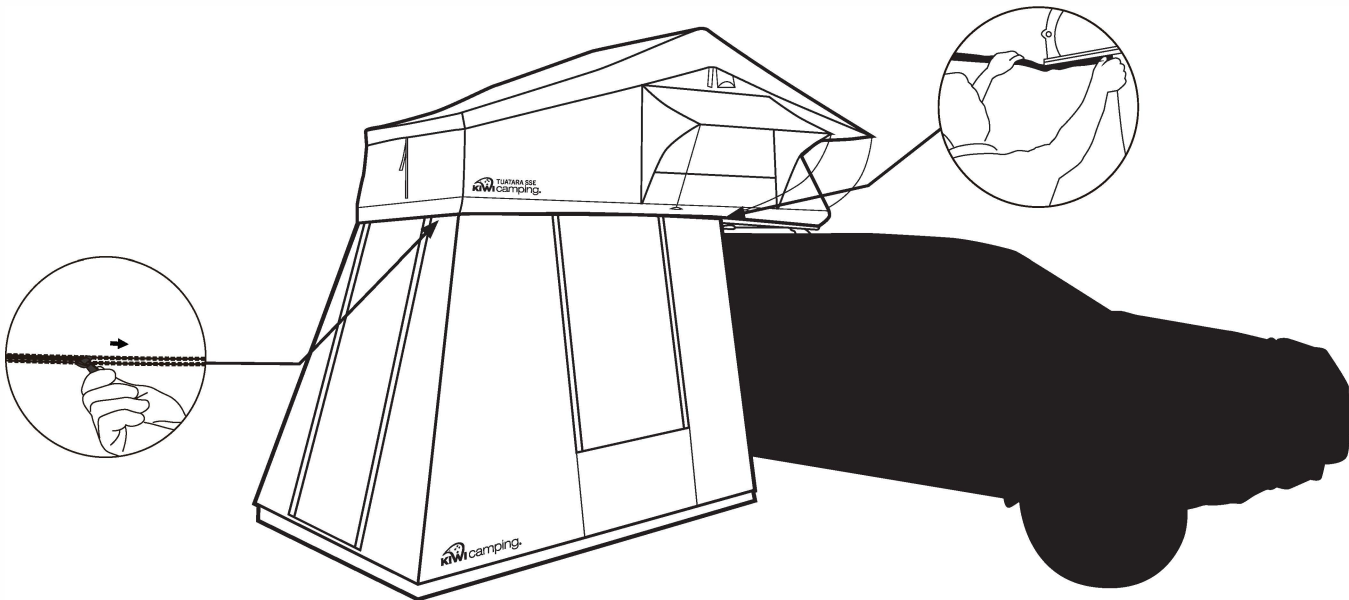

To make sure the annex stays in place insert the pegs into the ground at a 45° angle, not straight down.

1. When pitching the annex, position the vehicle, so the annex is facing away from the wind. Remove the annex from its carry bag, untie fabric ties and unroll.
2. Remove the SSE Rooftop Tent travel cover by sliding it from the sail track.
3. Locate the back side of the annex and insert the hook and loop track attached to the annex into the sail track.
4. Erect the SSE Rooftop Tent by pulling down the ladder. Fully erect the SSE Rooftop Tent following the instructions. Ensure the ladder sits in the middle of the annex and that it doesn't touch the sides.

5. Attach the annex to the SSE Rooftop Tent by attaching it with the zips underneath. It may require two people to reduce strain on the zipper. Once fully zipped, ensure that the rain flap is covering the zip to stop water from seeping through.
6. Peg out all four corners and the two guy ropes with pegs and tighten the tri-tensioners to ensure the annex remains securely anchored.

To ensure the annex sits correctly, the distance from the ground to the base of the SSE Rooftop Tent should be between 1700 -1800mm.

TO PACK DOWN

1. Ensure the annex is fully dry before packing away.
2. Remove all pegs and guy ropes.
3. Unzip the annex ensuring the zips are supported, so the zipper doesn't get damaged.
4. Use the ladder as leverage to fold the Rooftop Tent in half and then pack the tent following the instructions.
5. Remove the hook and loop track from the sail track.
6. Fold and roll the annex to fit into the carry bag.
7. Attach the SSE Rooftop Tent Travel Cover into the sail track.

ANNEX CARE INSTRUCTIONS

PLEASE READ ALL OF THE CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS ANNEX BEFORE USING IT FOR THE FIRST TIME.

1. Before you use your new annex, fully unpack and pitch it at home. It is important to familiarise yourself with the set-up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well if it rains and is protected from wind and other elements.
3. Keep clear of overhead power lines and trees when setting up your annex.
4. For best and easiest results, enlist the help of at least one other person to assist in pitching the annex.
5. Keep all flame and heat sources away from this annex fabric. Do not use open flame or gas appliances in or near your annex.
6. Do not use aerosol sprays or any solvent-based products in or around your annex as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
7. Please note, the warranty on this annex will be deemed void if the product is used for any purpose other than a **temporary, recreational** use shelter.
8. Handle the annex poles carefully. Twist gently but firmly to lock and unlock.
9. Especially in windy conditions, it is essential that you attach guy ropes and fasten them to the ground. We suggest you insert the pegs into the ground at a 45° angle towards the annex, not straight down. Please note, your annex will not be covered under warranty if wind damage occurs.

10. Use all of the guy ropes and pegs included to ensure your annex is secure and to prevent damage to both yourself and the annex. Check guy ropes/pegs daily.
11. Support the annex fabric when attaching to the Rooftop Tent, to take pressure off the zips. Ensure that the annex fabric is never overstretched.
12. To clean your annex, only ever use a soft sponge and warm water. DO NOT use excessive force or other harsh cleaners to remove marks from the annex.
13. Ensure the annex is completely dry and clean before storing away and ensure to store it in a dry environment.

IMPORTANT:

Try to avoid pitching your annex under trees as tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the annex fabric and its special coatings resulting in leakage or discolouration.

WARRANTY INFORMATION

The warranty period for this annex is found on the packaging and full details are on the Kiwi Camping website - www.kiwicamping.co.nz.

Key points:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this annex will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by: Aber Living, Hamilton, NZ
www.kiwicamping.co.nz

5290-01/22