

## Product Parts

### Your Kiwi Camping Supa Nova Tent includes:

1x Polyester tent inner  
1x Polyester tent fly

Pegs x 52 (6mm x 230mm)  
Ropes x 18

Poles:  
2 x BLACK fibreglass main dome poles (11mm diameter x 6480mm)  
4 x GREY fibreglass main dome poles (11mm diameter x 2000mm)  
8 x Black STEEL frame poles (16mm diameter x 1840mm)  
4 x Black STEEL PORCH poles (16mm diameter x 1800mm)

NB: This tent comes with a repair kit for emergency temporary repairs.

## Pitching Instructions

***NOTE: Read all tent care instructions included in this manual before use!***

### Step 1:


Select a dry, level site and clear any sharp objects that may puncture the floor. Remove the tent from its carry bag, untie fabric ties and unroll the tent.

- Save the fabric ties to make packing the tent away easier.
- Avoid camping under trees as sap and bird droppings may damage the canvas.
- You will need two people to pitch the tent safely and efficiently.

### Step 2:

Spread out the floor of the inner tent and peg out the four main corners first, ensuring that the tent is pulled taut and square.


- To make sure the tent stays in place insert the pegs into the ground at a 45° angle, not straight down.
- Unzip and open the doors to make erecting the tent easier.

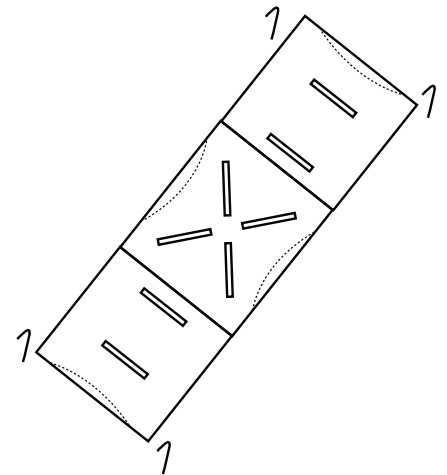

### Step 3:

Assemble the two BLACK fibreglass poles by interlocking the sections together. One at a time, slide the poles through the BLACK pole sleeves, that run across the roof of the centre room.

- These poles will create an 'X' over the centre room.

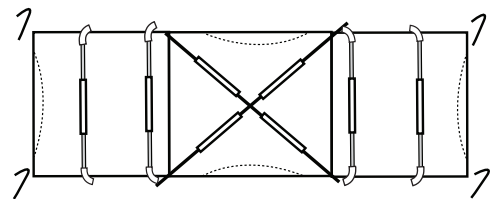


### Step 4:

Assemble the four GREY fibreglass poles by interlocking the sections. One at a time, feed these poles through the pole sleeves with GREY trim. Insert the ends of the grey fibreglass poles into the plastic fittings.

### Step 5:

One at a time, bend the BLACK fibreglass poles to create an arc and then connect each end of the BLACK fibreglass poles to the metal pins at the base of the inner on either side of the main doors. Attach the speed hooks to the corresponding poles.

- This is best done with two people.

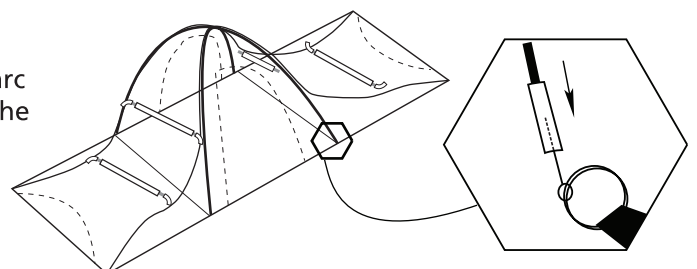


## Pitching Instructions - continued

### Step 6:

Assemble the eight STEEL poles and insert them into the remaining opening of the knuckles at the top of the inner. Alternate between the two end rooms and raise each set of poles. Fit the bottom of each pole on to the corresponding pin at the base of the inner so that the tent now stands up.

- The end of the steel pole with the small hole should be at the bottom.

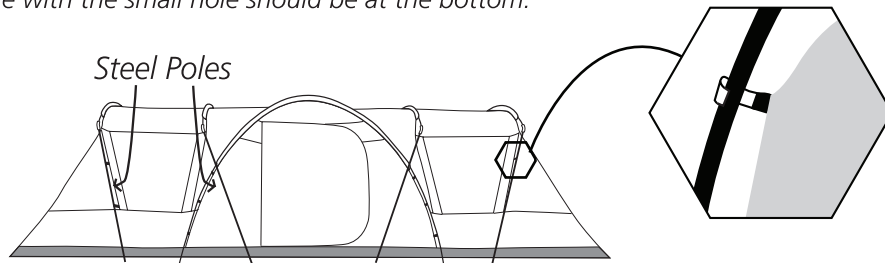

### Step 7:

Attach the speed hooks to the steel poles. Peg out the remaining pegging points ensuring the tent is square. The inner tent is now pitched.

### Step 8:


Carefully pull the fly up over the inner tent. Align the tent and rubbing strips over the knuckles. Wrap the Velcro ties on the underside of the fly around the corresponding poles and tie the fabric ties around the corresponding knuckles and poles.

### Step 9:

Peg out the two front corners of the fly and proceed to peg out the remaining pegging points on the fly ensuring there is an adequate and even gap between the inner and the fly.

### Step 10:

Finally rope out the guy ropes and fine tune the fly so it remains taut and positioned correctly over the tent.

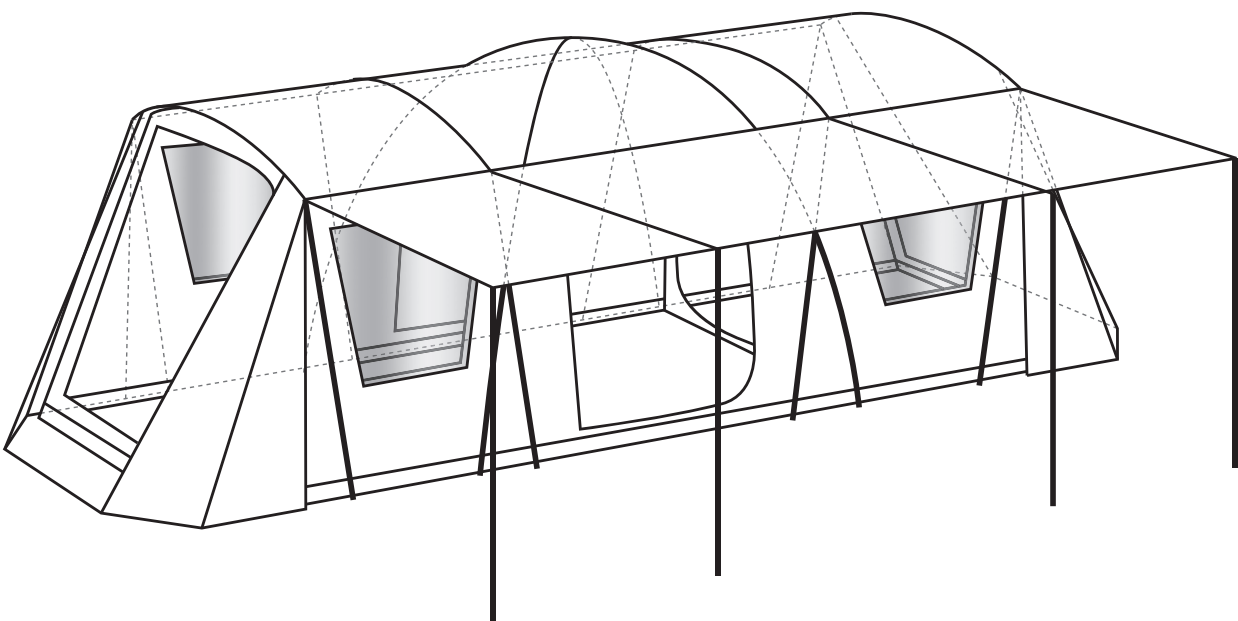

**REVERSE THIS PROCEDURE TO LOWER THE TENT**