


## PITCHING INSTRUCTIONS


### YOUR TENT INCLUDES:

- 1 x tent (with air tubes and 25 x 5mm guy ropes attached)
- 51 x steel pegs (8mm D x 250mm L)
- 5 x 135mmØ main frame air tubes (2 with inbuilt self-inflating pumps)
- 4 x 100mmØ support air tubes
- 1 x hand pump
- 2 x lithium-ion batteries
- 1 x cross-over valve removal wrench
- 1 x peg mallet
- 1 x repair kit

1. Select a site to fit the footprint of the tent: 4.5m W x 2.25m H x 7.6m D, with enough room to pitch out guy ropes. The site should be a dry, level site and clear of any sharp objects.
2. Lay out the optional groundsheet and peg it down, ensuring it is wrinkle-free. Remove the tent, pegs and hand pump from the carry bag. Untie the fabric ties and unroll the tent with the floor facing down.
3. Spread out the tent and peg out the four main corners, ensuring the tent is pulled taut and square. Peg out the remaining pegging points on the floor. To make sure the tent stays in place, insert the pegs into the ground at a 45° angle. It is recommended to pitch the tent so it is in line with the wind, never side on.
4. The optional blackout fly can be laid out on top of the tent and connected before inflation.
5. There is an external valve located on each air tube. Before inflating, all valves need to be screwed into the air tubes and internal cross-over valves opened.

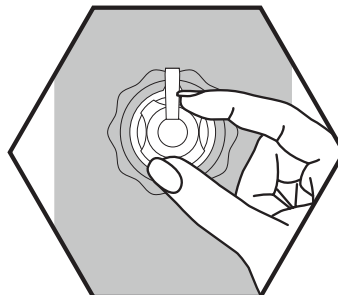

Close external valves

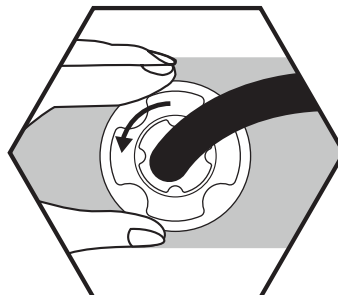

Screw cross-over valve anticlockwise to open

6. Install the tent pump batteries into the pump, you will hear a CLICK once it is in place. Press the small power button on both pumps to start inflating the tent.

*Note: Ensure the protective zipper is closed in wet conditions after installing and operating the pump.*


7. After 3-4 minutes, you may need to help the air tubes stand up to inflate evenly and in the correct shape. After 6-7 minutes, the tent will reach the desired psi, and the pump will automatically shut off.

*Note: In the event of flat batteries, or if more pressure is required - insert the hand pump hose into the central air tube valve and inflate first, followed by the front and back air tubes.*

*You may need to help the air tubes stand up to inflate evenly and in the correct shape. Make sure to only inflate to the recommended pressure (6-8psi), as over-inflation can lead to air tube damage. Replace the top cap of the valve after inflating each air tube.*

*It is recommended in hot weather that 6psi is used to allow for air expansion inside the air tubes. In cooler/windier conditions, 8psi is recommended. Adjust the pressure in the air tubes as the ambient temperature changes. Only use a manual or electric pump with a inbuilt pressure gauge.*


8. Adjust the base of each air tube so it sits flat with the ground. This will ensure that the tent sits evenly.
9. If you haven't already done so, carefully pull the optional blackout fly over the tent. Beginning at the rear of the tent, turn the fly upside down and attach the back corner clips. With two people holding opposite corners, carefully walk to the front of the tent and clip in the front corners. Secure the fly to the tent using the hook and loop tabs and then the remaining clips.
10. Rope out the guy ropes and ventilation ports and fine-tune the tent so it remains taut and positioned correctly.

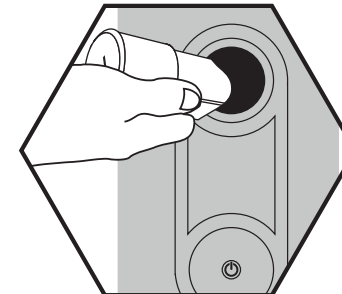


Insert battery



Press power button

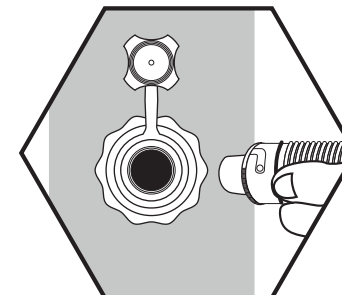

Manual inflation point

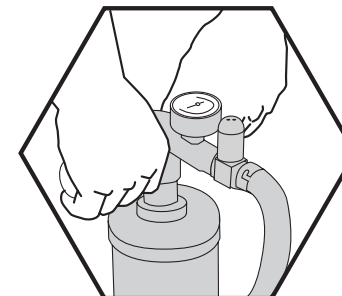


11. Close the cross-over valves, remove the battery packs and close the protective rain covers.

*Tip: These battery packs can now be used to power your camp lighting.*

12. If using the optional front wall attachment, start by partly zipping the walls on both sides, then zip toward the centre.

13. If using the optional single pod, begin by clipping the pod room onto the provided clips on the side of the tent and work upwards towards the centre of the tent. Please read the care instructions for more product information about your tent.

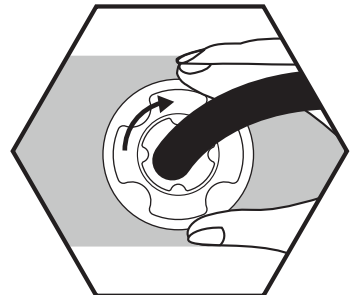


Screw cross-over valve clockwise to close

## PACKING INSTRUCTIONS

### REVERSE THE PROCEDURE TO LOWER THE TENT

1. Ensure the tent is completely dry and clean before storing away and store it in a dry environment. Remove the optional pod room, fly and front wall, fold and pack away. Zip closed all doors and windows to prevent creasing.
2. Ensure battery packs are safely stored away in the carry bag. Remove all but the four corner pegs from the tent.
3. Ensure all internal cross-over valves are set to open. Deflate the air tubes from the outside towards the middle by unscrewing the valve caps and releasing all the air in the air tubes.
4. Once the tent is deflated, remove the corner pegs. Fold the tent as shown below. Ensure that the air valves are not obstructed to allow the remaining air to escape. To reduce the chance of valve malfunction, the valves should be fully unscrewed when the product is in storage.
5. To ensure a tightly rolled tent, use the provided compression straps/ties to maintain the tents compression, this will relieve pressure on the tent carry bag and ensure your next setup is as quick as possible. Place the carry bag over the rolled tent, then roll both together until they are right-side up and the tent is inside the bag.

*Note: NEVER store your tent wet or dirty (even for short periods of time). This causes mould. If packing a tent away damp, unpack and dry as soon as possible.*

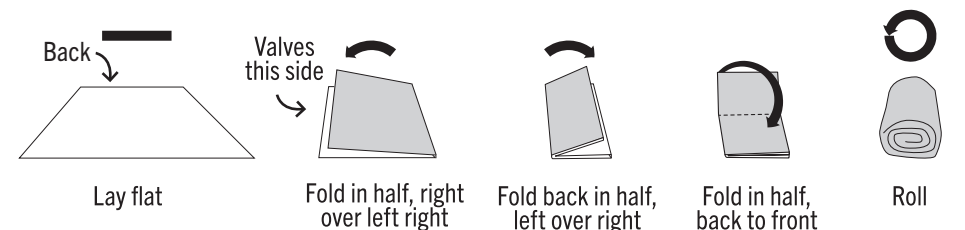

# TENT CARE INSTRUCTIONS

## PLEASE READ ALL OF THE TENT CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS TENT BEFORE USING YOUR TENT FOR THE FIRST TIME.

1. Before using your new tent, fully unpack and pitch it at home. It is important to familiarise yourself with the set-up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry and, will drain well if it rains and is protected from wind and other elements. An optional groundsheet is recommended. Keep clear of overhead power lines. Try to avoid pitching your tent under trees as tree limbs, falling leaves, sap, bird droppings, or excess water dripping from the trees can cause damage to the tent fabric and its special coatings, resulting in leakage or discolouration.
3. For best results, enlist the help of at least one other person to assist in pitching the tent.
4. Only remove the tent pegs by pulling on the peg itself. NEVER pull on the tent or the webbing loops to remove pegs, as it could result in damage to the tent or personal injury.
5. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary, recreational use shelter.
6. Do not leave the tent exposed to direct sunlight for extended periods. UV light is one of the most damaging elements for your tent.
7. Under certain conditions (cold weather, high humidity, etc.), condensation may form on the inside of your tent fly. Condensation can occur for many reasons, including vapour from your breath, perspiration, cooking nearby or wet clothing inside your tent. This does NOT mean your tent is leaking through the fabric. You can minimise condensation by opening windows, airing out your tent during the day, and by removing any wet clothing/towels, etc.
8. Support frames and fabric should be pulled taut, NOT over-stressed. When closing doors, ensure you hold the flaps up to take pressure off the zips. Ensure that the tent is never overstretched, as this may cause problems with the internal doors.
9. Never store your tent away damp and ensure it is stored in a well-ventilated area, preferably off the floor. Should mildew spots appear, brush them off before they become attached. Mildew damage of any kind is not covered by our guarantee. DO NOT use excessive force or other harsh tools to remove spoilage from the tent.
10. Like all assets, polyester tents require regular care and attention to give the life and service expected. Regular cleaning with an abundance of clean water and a soft brush, especially after exposure to salt water will preserve your tent's life. Do not allow bird droppings, earth or vegetable matter to remain in contact with the fabric. NEVER USE SOAPS OR DETERGENTS.
11. To maintain zippers. Unzip the zippers and wipe each side with a cloth or toothbrush dipped in soapy water. Rinse and then dry thoroughly. If zippers stick, apply silicone spray with a toothbrush or rub with paraffin wax. Avoid overuse as this can attract more dirt, and avoid touching the fabric. Some of these products contain chemicals, which can destroy your tent's proofing and cause it to leak.

12. Avoid using aerosol sprays and keep petrol, oil, solvents and other similar fluids away from the fabric. Do not use these inside or around your tent as any damage caused by these is not covered by our guarantee.
13. Always remember that your tent is made from polyester and should not be compared with a house. It is waterproof under normal conditions but in severe weather conditions some water may penetrate. If you apply waterproofing to your tent, check that you are applying the right one for your tent's fabric type.
14. Make sure your tent is pitched properly and keep a close eye on the weather, as we have no control over how and where the tent is used or pitched. Extra pegs and ropes are recommended in stormy conditions. Please note that wind damage is not covered by our guarantee. Check and adjust guy ropes and pegs daily.
15. Tent fabrics are not 100% colourfast, and some fading will occur naturally, however, this does not affect the performance of the fabric. Do not leave your tent up and unattended for extended periods of time. Tents are not designed as permanent dwellings. Tents are guaranteed for normal camping use only.
16. Changing atmospheric conditions can make the air tubes appear to lose or gain pressure. This is commonly caused by rising or lowering ambient temperature. Should this occur, the air tube will simply require either a top-up or release of excess pressure. We recommend occasionally checking the pressure throughout the day to ensure it is the correct psi. It should NOT be considered a sign of leakage or puncture. However, where leakage is suspected, you should first inspect the valve to ensure that no parts are cross-threaded and that the air seals are in good condition and tight. Removing a valve and then re-fitting and re-inflating may help.
17. After a trip, wash/rinse down the tent, removing all dust and salt build-up from the environment. Ensure you are wiping down the groundsheet of your tent before packing away to remove all environmental material.
18. Punctured air tubes can be repaired using Tear Aid B. For information on how to repair a puncture, see the Kiwi Camping YouTube video: *Kiwi Camping Air Tube Repair Tutorial*. Spare air tubes are available to purchase from your stockist.

FOR MORE INFORMATION  
ON THE TUI 8 AIR  
SCAN THE QR CODE.



# IMPORTANT

1. Proper air ventilation is crucial for your comfort and safety. Without adequate ventilation, condensation and carbon monoxide can build up. Although your tent is designed for ventilation under normal conditions, condensation may still occur if it is completely sealed in wet or humid environments. Additionally, carbon monoxide can accumulate from heating appliances and the expulsion of air.  
  
To prevent these issues, ensure that all ventilation points are open. We recommend opening a low vent on the windward side of the tent and a higher vent on the leeward side to promote optimal airflow.
2. Although treated with a fire-retardant coating, no tents are fireproof; if exposed to flame or high heat sources, they can ignite and burn. Keep all flame and heat sources away from this tent fabric. Do not use open flame or gas appliances in or near your tent. In the event of a fire, cut through fabric and evacuate immediately. We recommend keeping a sharp object in any room without an exit, window mesh is the easiest material to cut.
3. STORAGE:  
NEVER store your tent wet or dirty (even for short periods of time). This causes mould. If packing a tent away damp, unpack and dry as soon as possible.  
NEVER store loose pegs or poles inside your tent. Always use the separate bags they are supplied in.
4. You may want to insure your tent against loss or damage.

## BATTERY TROUBLESHOOTING/CARE:

- Only use the supplied charger for this item.
- LED indicator on the battery will be RED while charging and GREEN when fully charged.
- Do not leave the batteries on charge once fully charged.
- If the light is flashing RED, this indicates a problem with the charging; check the connection points to ensure it is inserted correctly; if it continues, contact us/after-sales.

# WARRANTY INFORMATION

The warranty period for this tent is found on the packaging and full details are on the Kiwi Camping website - [www.kiwicamping.co.nz](http://www.kiwicamping.co.nz).

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside its warranty period, we can repair the product at a nominal cost.



Distributed by: Aber Living, Hamilton, NZ  
[www.kiwicamping.co.nz](http://www.kiwicamping.co.nz)  
5650-03/25