


TUATARA 270° 2.5M SELF-SUPPORTING AWNING

Left/Passenger Side Model No. KC077-060 Right/Drivers Side Model No. KC077-061

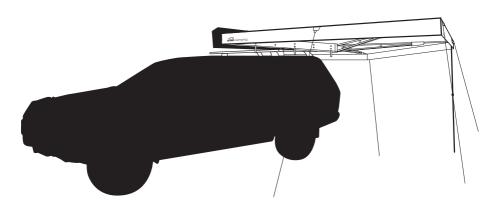

SAFETY INSTRUCTIONS

- Regularly check nuts and bolts attaching the awning to your vehicle to make sure fastenings are tight and in good condition.
- If using a commercial car wash, remove awning and fixtures to avoid damage.
- Do not use awning or travel cover to hoist, lift or support yourself.
- It is important when mounting to a vehicle, that the mounting brackets supplied are adequately spaced to support the weight of the awning.
- Products applied to a vehicle roof will alter vehicle handling. The manufacturer disclaims
 all responsibility in relation to accidents due to improper use, incorrect maintenance, or
 negligence in maintaining fastening hardware.
- This awning will support Tuatara 270° Wall Sets (KC077-007 2.5m Wall Set). Attaching
 different models, or inappropriate weight, could damage frame and will not be covered
 by warranty.
- If pitching in windy conditions it is advised to find a less exposed location. Park the vehicle
 so the awning is protected from the wind. Ensure legs are extended and all guy ropes are
 pegged out correctly. Be aware of dropping branches and other potential hazards. Collapse
 the awning in strong winds.
- Keep hands free of pivoting frame when opening and closing awning.
- Polyester ripstop canvas is not fire proof, if exposed to flame or high heat sources it can ignite
 and burn. Always take care when using spirit or gas appliances such as stoves and lanterns
 near your awning.
- Never drive with awning erected.

ATTACHMENT INSTRUCTIONS

YOUR TUATARA 270° AWNING INCLUDES:

1 x awning	with	travel	cover
------------	------	--------	-------

3 x heavy-duty L-brackets

6 x mounting plates

12 x M8 x 16mm sets (bolt, nut and washer)

11 x M8 x 45mm sets (bolt, nut and washer)

6 x M8 x 30mm T-bolt sets (bolt, nut and washer)

6 x M8 x 35mm T-bolt sets (bolt, nut and washer)

1 x webbing hook

2 x separate telescopic twist lock poles

8 x guy ropes

8 x pegs

You will also need:

1 x adjustable crescent spanner or 13mm spanner/socket

1 x person to help attach the awning to the vehicle


INSTALLATION INSTRUCTIONS


Secure L-brackets to the vehicle

To attach L-brackets to a T-slot crossbar

- Slide two T-bolts into each crossbar. Orientate the bolt base for the best fit. Measure the distance required between each awning bracket, this will vary depending on your roof rack.
- 2. Place the supplied L-bracket on top of your crossbars, with the vertical end facing away from the vehicle.
- Line up the bolts to the L-brackets. Once aligned, add the washers and nuts and loosely tighten. Repeat with the remaining brackets.

Tip - The awning pivots from the furthermost end. Ensure the pivot point is located to suit your vehicle. Ensure vertical faces of L-brackets are aligned before fully tightening. Where possible, use three L-brackets for better support in bad conditions.






To attach L-brackets to a crossbar


1. Place the supplied L-bracket on top of your crossbars, with the vertical end facing away from the vehicle.

Tip - Ensure vertical faces of L-brackets are aligned before fully tightening.

- Place a mounting plate above and below the crossbars.
 Once aligned, use two M8 x 45mm sets and fully tighten.
 Repeat with remaining brackets.
- For extra stability we recommend drilling an M9 hole in your existing crossbar to anchor a point closest to the awning. Fix with an M8 x 45mm bolt.

Note - When travelling in rough terrain, mounting brackets can gradually loosen. Regularly check fixings. We recommend T-slot mounting in challenging conditions. Where possible, use three L-brackets for better support.







Attach your awning to the L-brackets

- 1. Slide M8 x 16mm T-bolts into the awning channel found on the back side of the awning (we recommend six on the top and six on the bottom for three L-brackets).
- 2. With a partner, hold awning up to L-bracket and align T-bolt threads with L-bracket holes on vertical faces.
- 3. Insert T-bolts through the L-bracket holes. Once aligned, add the washers and nuts and fully tighten.

Tip - It is recommended to take a short drive after attaching fixtures. Check on return to see if any further tightening of brackets is necessary. Check fixtures regularly during use.







PITCHING INSTRUCTIONS

- 1. Unzip the travel cover and fold out of the way. Release the compression straps and carefully unroll.
- Slowly walk the awning out until it is fully extended. Secure the webbing hook at the furthermost points of the awning to your roof rack or vehicle and tension.
- 3. Extend the anti-pool risers located on top of the frame.
- 4. If windy or if attaching optional walls, release the two attached vertical poles and extend. Twist to lock the poles in place. If necessary, secure the remaining two arms with the separate poles included.
- 5. Peg out all guy ropes to ensure the awning remains securely anchored. In wet weather, peg the mid-point guy ropes to encourage rain run-off away from the vehicle.


Tip - Insert pegs at a 45° angle to ensure the pegs won't pull out.











COLLAPSING INSTRUCTIONS

- 1. Carefully remove pegs, roll-up the guy ropes, remove excess soil from the pegs and store them in their bag.
- 2. Twist to unlock the poles and secure back in place.
- 3. Collapse the anti-pool risers.
- 4. Release the webbing hook from the vehicle.
- 5. Slowly walk the awning until it is fully closed. Ensure the pivoting end is pushed in fully. Roll the awning up, ensuring the fabric is not doubled over. Keep compression straps clear of the frame.
- 6. Tightly roll up the awning until the compression straps can be secured.
- 7. Fold back the travel cover and zip to close.

CARE INSTRUCTIONS

PLEASE READ ALL OF THE CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS AWNING BEFORE USING IT FOR THE FIRST TIME.

- 1. Never store your awning away damp. Should mildew spots appear, brush them off before they become attached. Mildew damage of any kind is not covered by our warranty. DO NOT use excess force or other harsh tools to remove soilage from your awning.
- Like all assets, polyester ripstop canvas awnings require regular care and attention to give
 the life and service expected. Regular cleaning with an abundance of clean water and a soft
 brush, especially after exposure to salt water will preserve your awning's life. Do not allow bird
 droppings, earth or vegetable matter to remain in contact with the fabric. NEVER USE SOAPS OR
 DETERGENTS.
- Polyester ripstop canvas is not fire proof, if exposed to flame or high heat sources it can ignite and burn. Always take care when using spirit or gas appliances such as stoves and lanterns near your awning.
- 4. Some products contain chemicals, which can destroy your awnings proofing and cause it to leak. Avoid using aerosol sprays and keep petrol, oil, solvents and other similar fluids away from the fabric. Do not use these inside or around your awning as any damage caused by these is not covered by our warranty.
- 5. Always remember that your awning is made from cloth, and should not be compared with a house. It is waterproof under normal conditions but in severe weather conditions some water may penetrate. If you apply water proofing to your awning check that you are applying the right one for your awning's polyester ripstop canvas type.
- 6. Extra pegs and ropes are recommended in stormy conditions. Please note, wind damage is not covered by our warranty. Check and adjust guy ropes and pegs daily.
- 7. Awning fabrics are not 100% colourfast and some fading will occur naturally, however; this does not affect the performance of the fabric. Do not leave your awning up and unattended for extended periods of time. Awnings are not designed as permanent dwellings. Awnings are guaranteed for normal camping use only.
- 8. Check all fixtures regularly and tighten when necessary.
- 9. When rolling up awning, ensure there are no creases or folds in the fabric.

